
English Guide
Part Names

- The number shown in each [page-number marker] is the page number where the part's function and/or use are explained in Japanese.


Front view

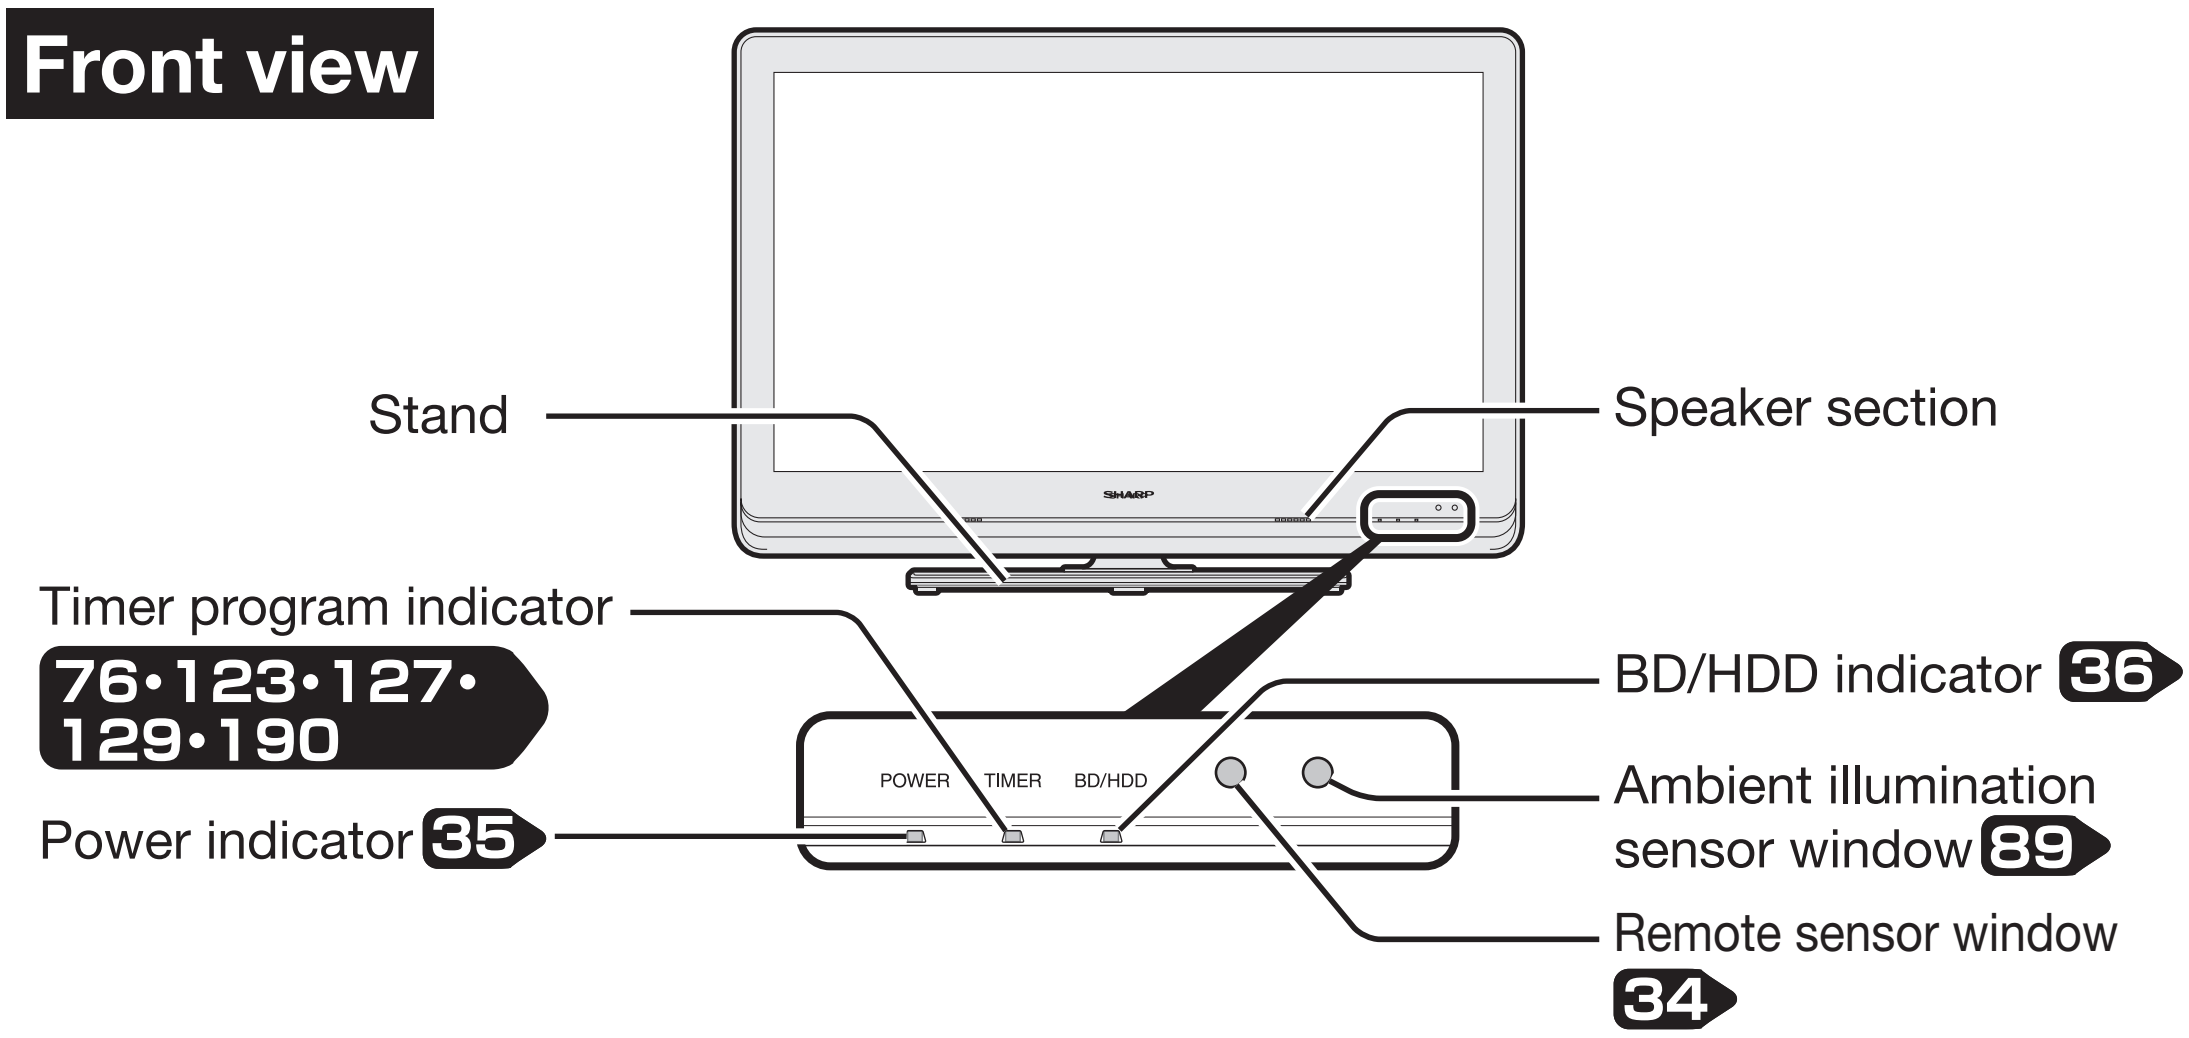


Adjusting the LCD panel angle
- The LCD panel can be rotated horizontally up to 20° clockwise and counter-clockwise.
- Hold the stand firmly when you adjust the monitor's angle.

Control panel

Right side view

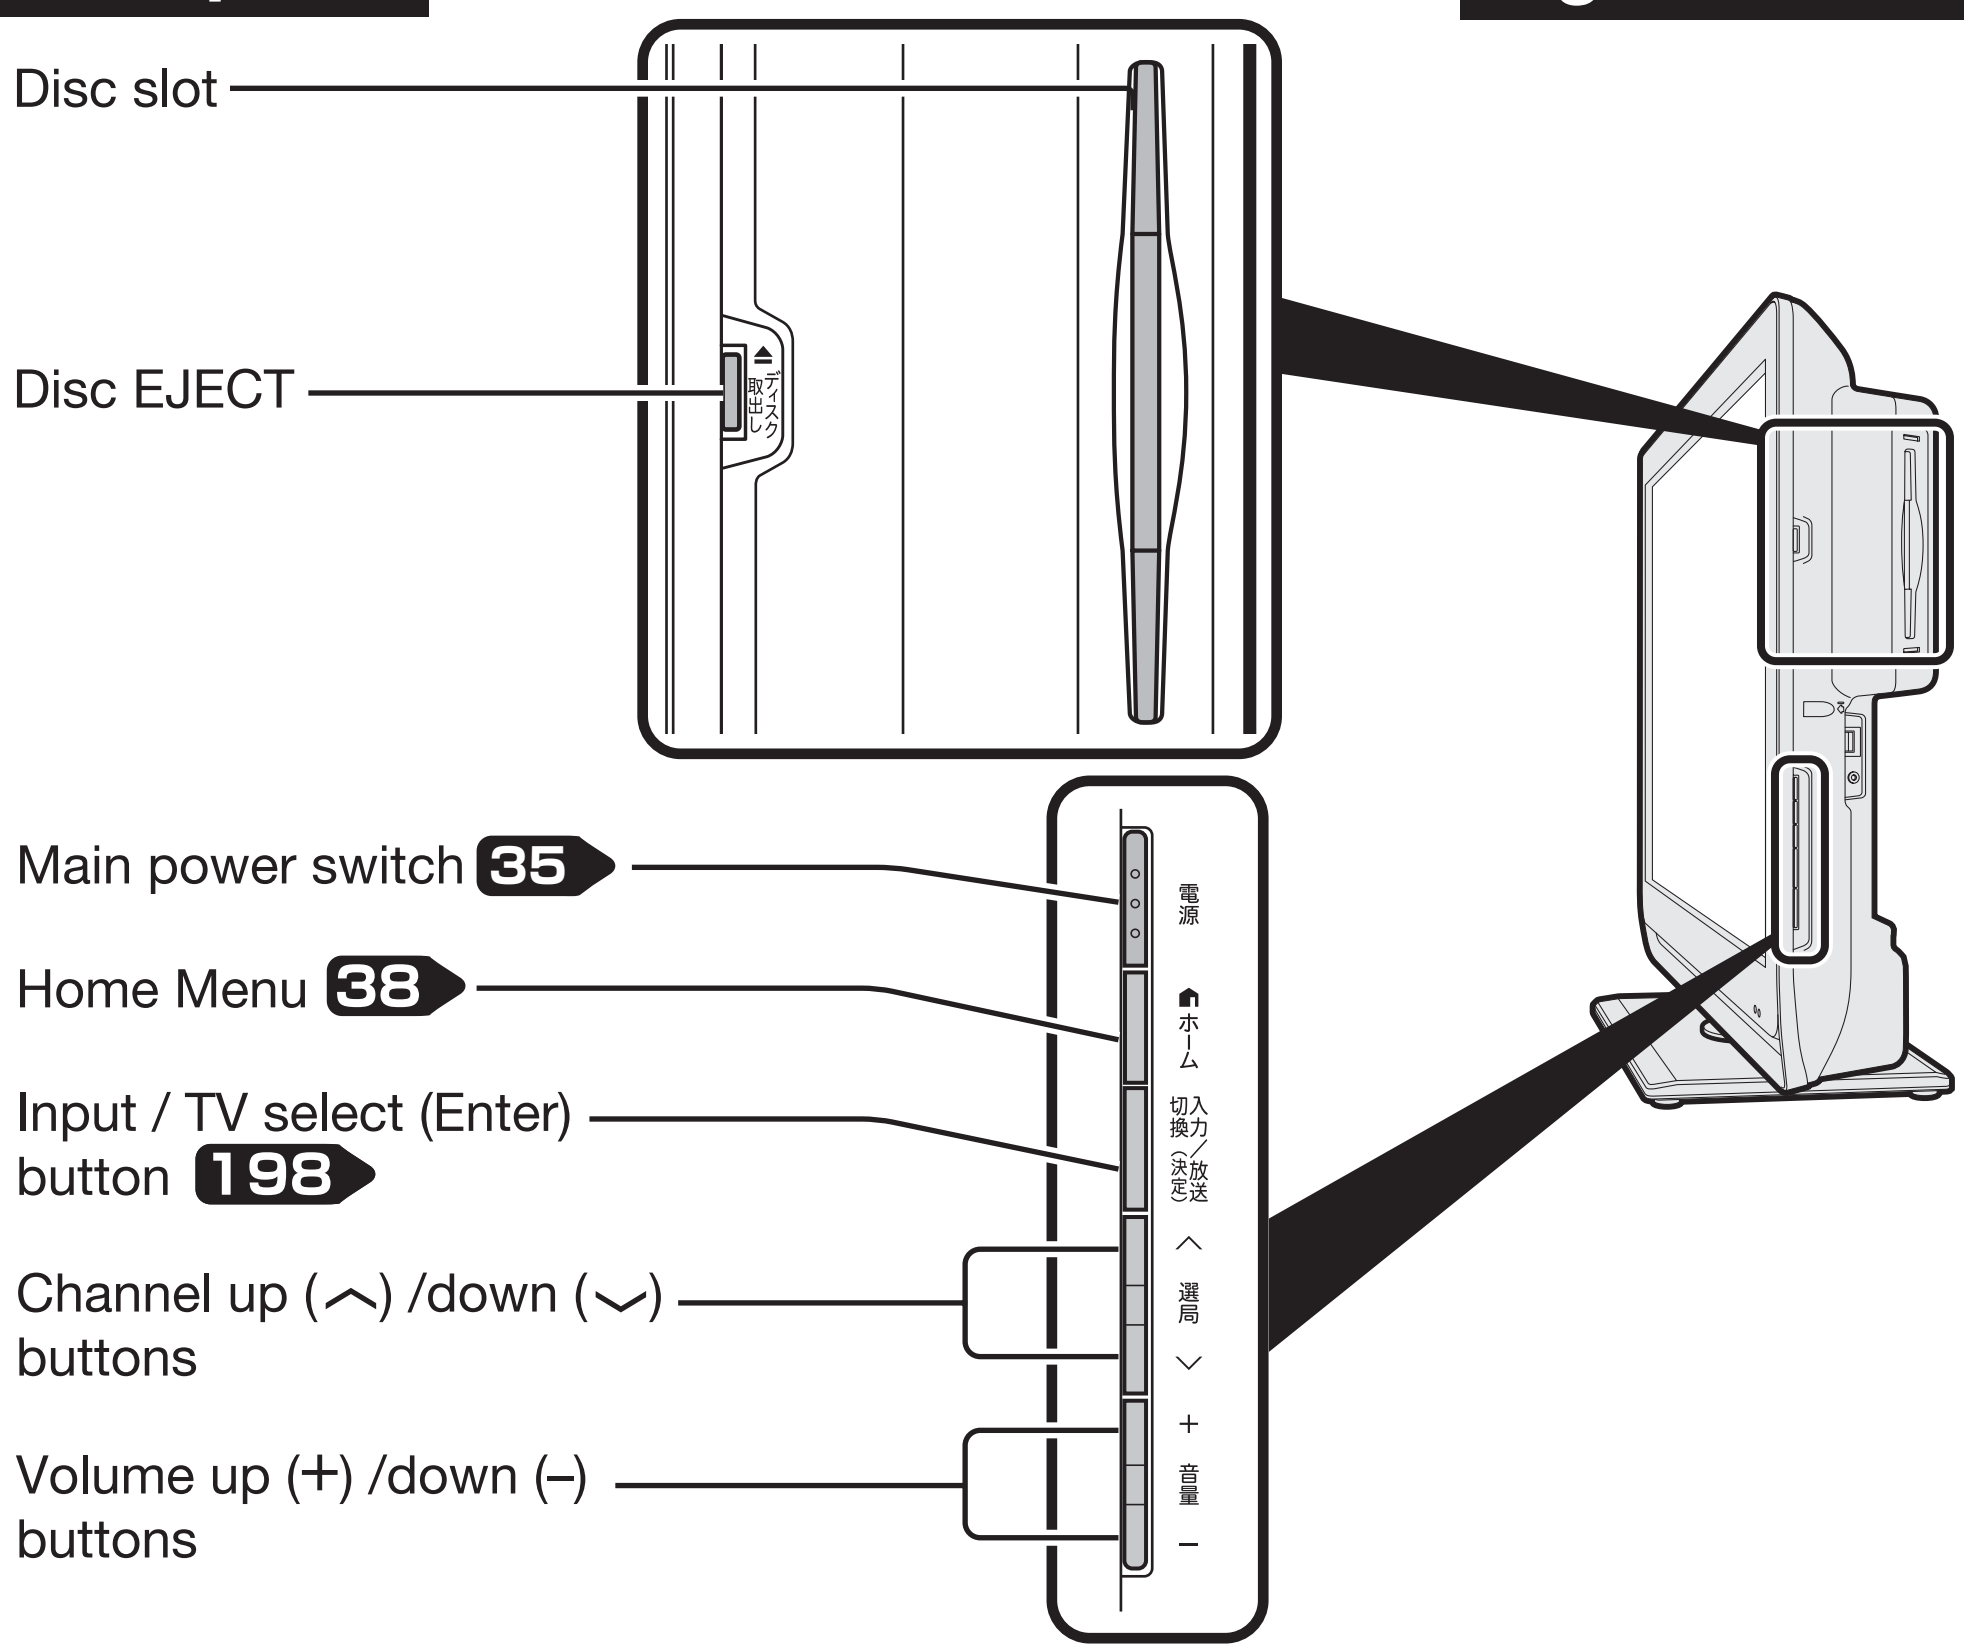


Back view

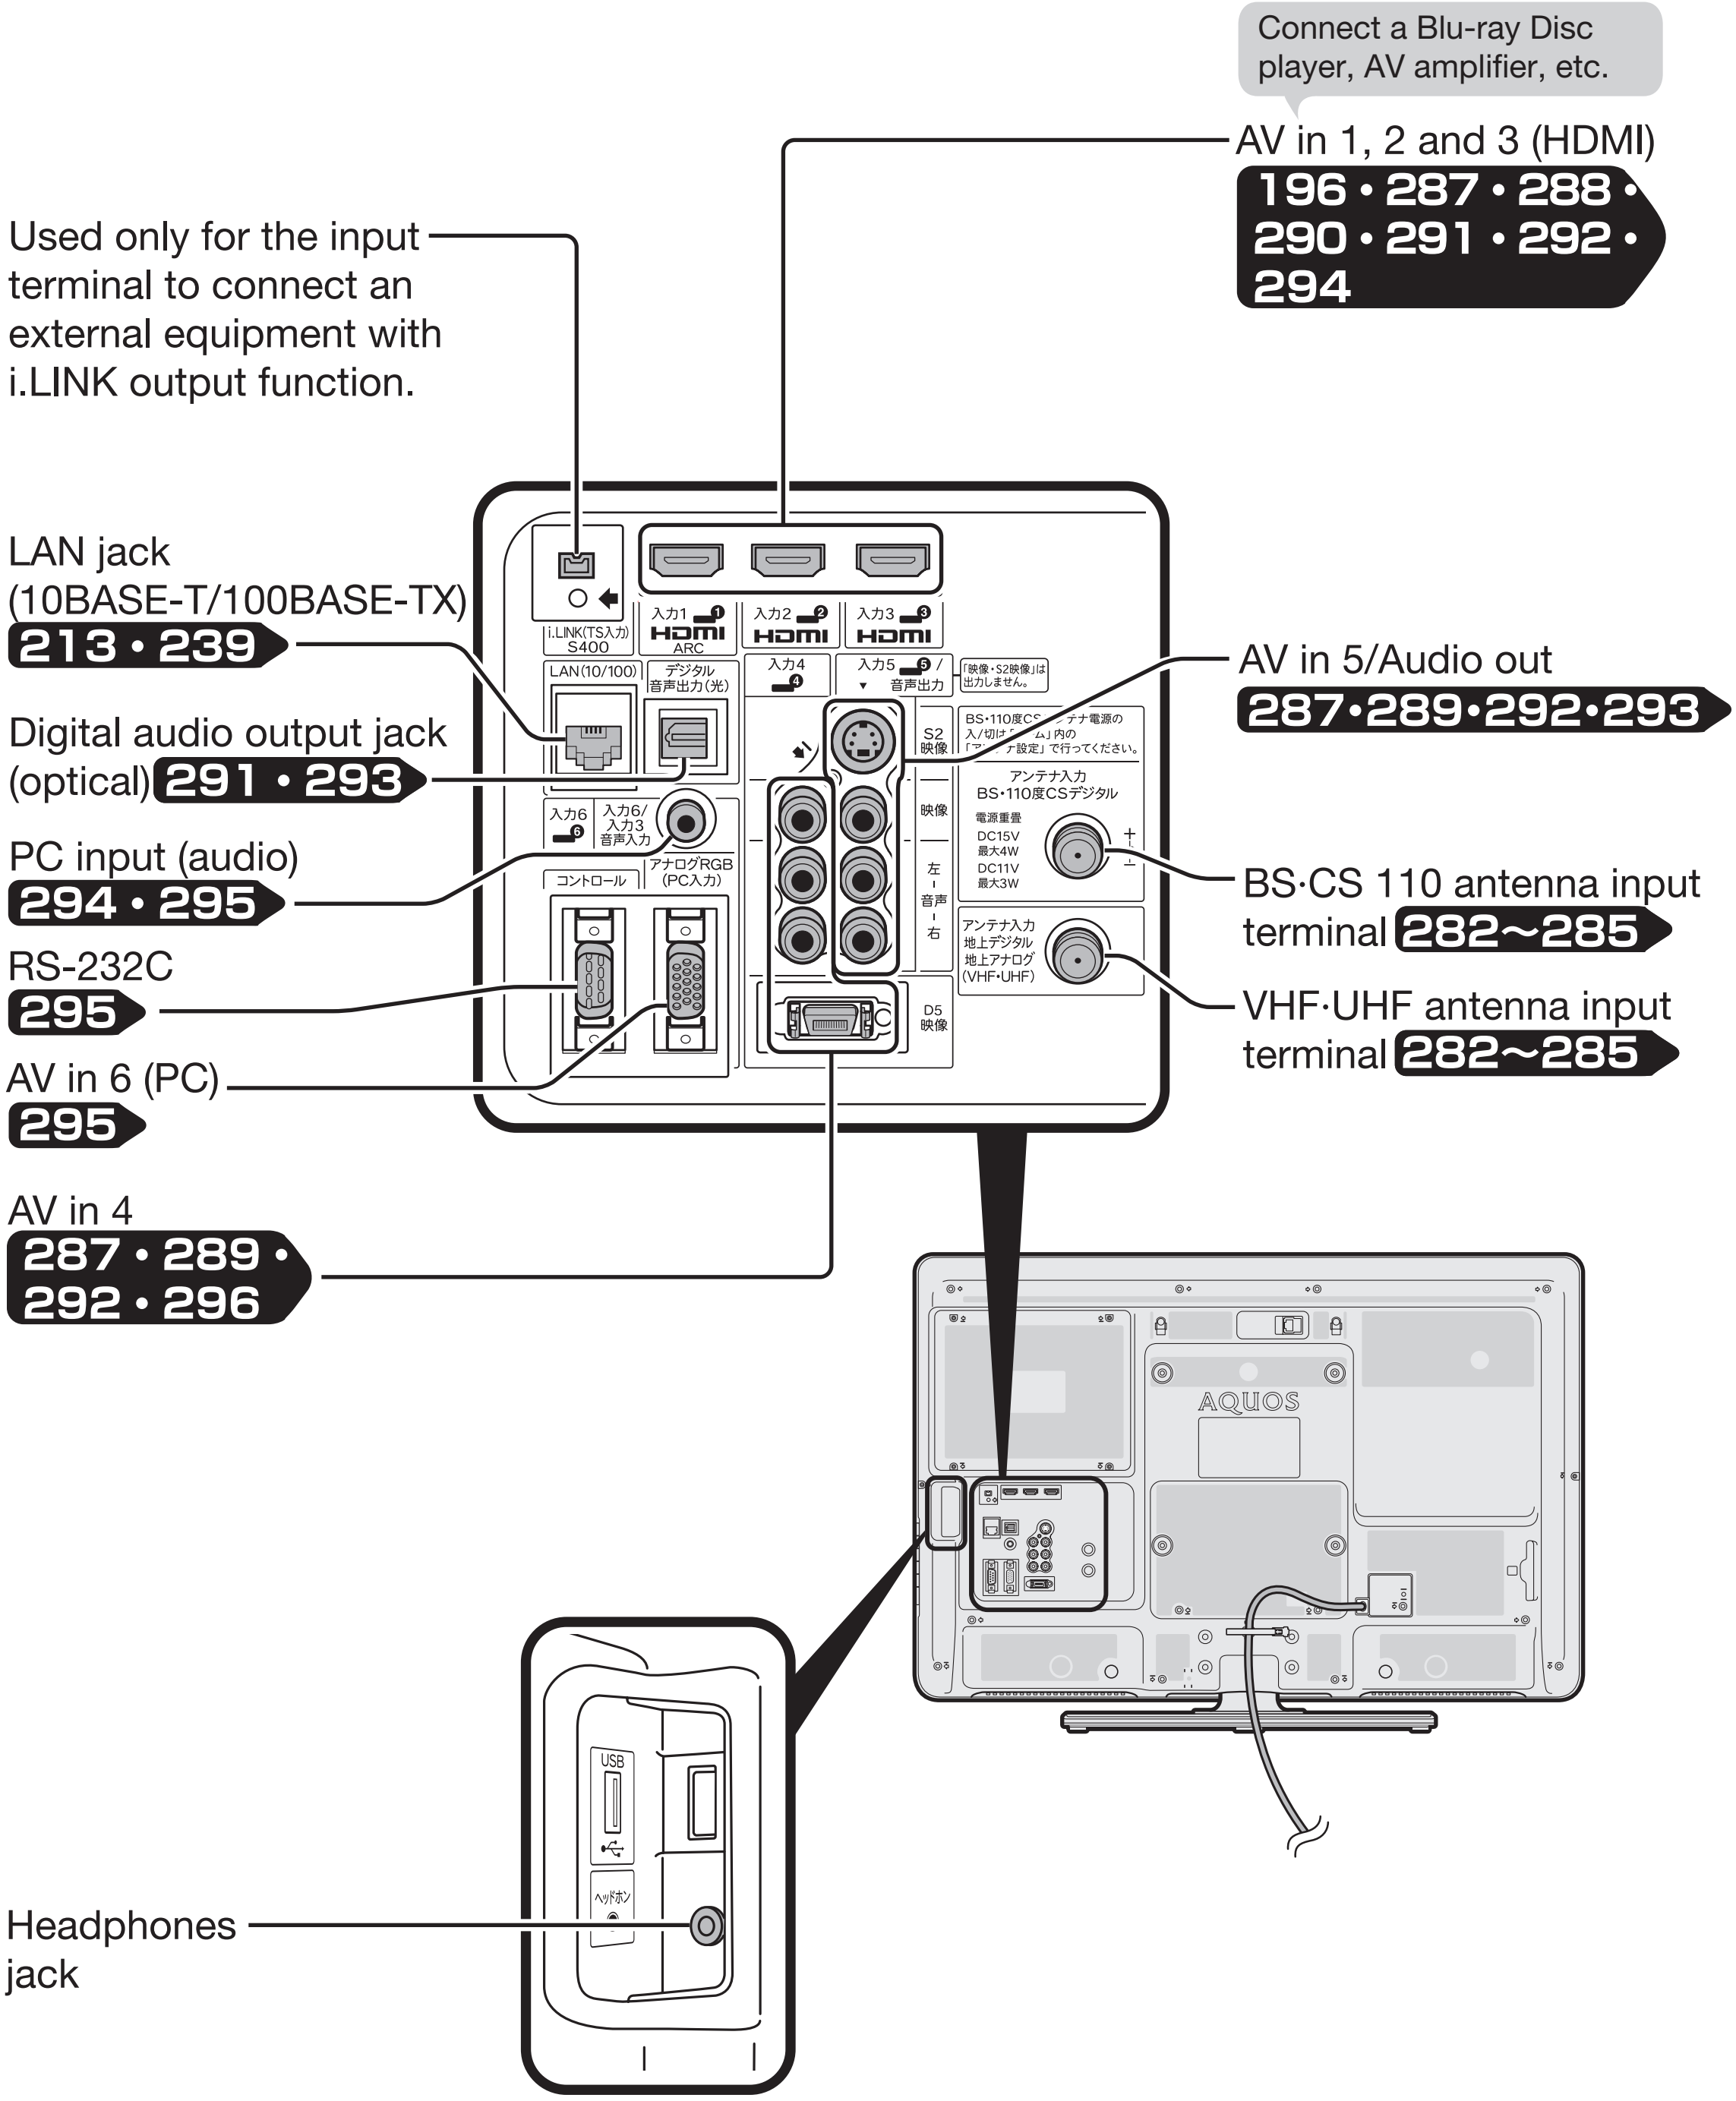

Connect a Blu-ray Disc player, AV amplifier, etc.
AV in 1, 2 and 3 (HDMI)
196 • 287 • 288 • 290 • 291 • 292 • 294
Used only for the input terminal to connect an external equipment with i.LINK output function.
LAN jack (10BASE-T/100BASE-TX)
213 • 239
Digital audio output jack (optical)
291 • 293
PC input (audio)
294 • 295
RS-232C
295
AV in 6 (PC)
295
AV in 4
287 • 289 • 292 • 296
AV in 5/Audio out
287•289•292•293
BS·CS 110 antenna input terminal
282~285
VHF·UHF antenna input terminal
282~285
AQUOS
Headphones jack

Remote Control Unit

See Page **44** for how to select a program.

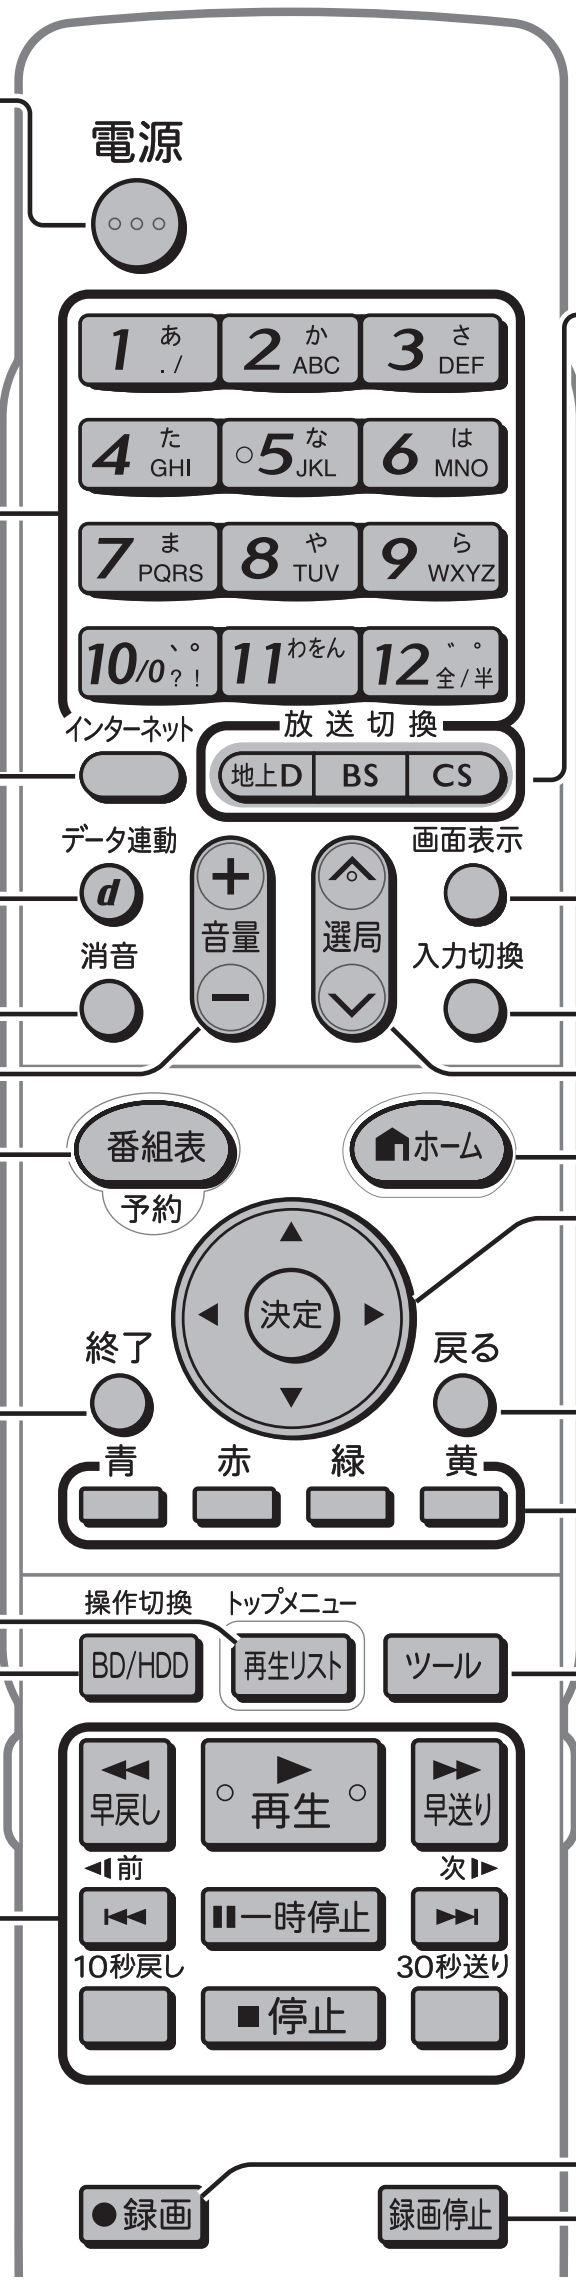

Active/Standby 35
Press to engage the TV set in the active or standby mode.

Channel select 44 • 244
- Press to select a channel.
- Use to input a number for various settings.

View the Internet or IPTV
229 • 244 • 248 • 252

Linked data broadcast
47 • 152 • 245

Mute 44
Press to temporarily turn off the sound. Press again to return the sound volume to the previous level.

Volume up (+)/down (–) 44
Press to adjust the volume.

EPG 57 • 122 • 189
Press to display or turn off the Electronic Program Guide (EPG: 番組表) when receiving a digital broadcast.
Select a future program in EPG to set a timer program.

Finish
Press to finish menu operation, etc.
* This button can be conveniently used when you are at a loss during menu or EPG operation, etc.

List the programs recorded on BD/HDD 135

Display the Top Menu of the disc 141

BD/HDD select
114 • 135 • 139 • 160 • 167 • 172 • 174

Play back programs recorded on a disc 134 • 161 • 162
Fast forward, rewind, etc. during playback 148

Terrestrial Digital/BS/CS 44
Select the CS digital channel for the first time. 304

Display 48 • 49
Press to display or turn off the channel call, etc.

Input select 121 • 172 • 198

Channel up (∧)/down (∨) 44
Press to select channels in the current network, media and CATV channels in the ascending or descending order.
* CATV channels are factory set to be skipped.

Display the "Home" Menu
38 • 39
Press to start some useful operations of the TV.

Cursor (up, down, left, right)
38 • 39
Enter/Confirm 38 • 39

Return 38


Color 58 • 59
Use to operate EPGs and data program screens.

Display the Tool Menu 42

REC 118~121
REC STOP 118~121

Buttons under the cover

Hold the cover by the projections ( ) and lift.

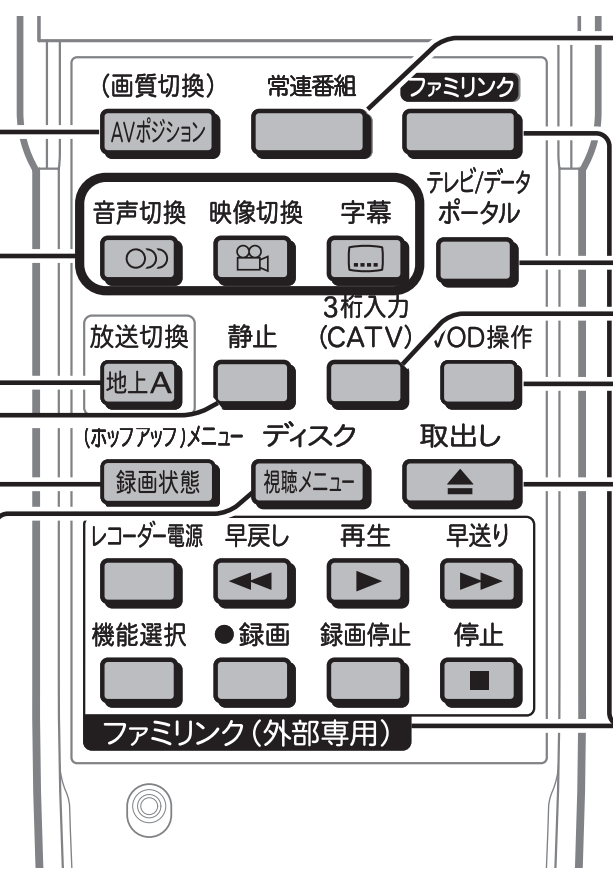

AV mode select 83

Audio select 67 • 68 • 152

Picture select 68 • 153

Caption 68 • 153

Terrestrial analog 44

Freeze 52

View status of the BD/HDD 114

Display the Pop-up Menu (BD) or Disc Menu (DVD) 141

Display the Playback Menu
154 • 155

Recommended programs select 64~66
Press to select a program which the TV set recommends.

Media select 44 • 47

CATV 46
Digital channel number input 46

Display the operation panel of VOD 249 • 253 • 265


Eject the disc 37

Familink
184 • 186 • 187 • 191 ~ 194 • 196
Press to operate "Familink" Recorders and AQUOS Audio connected via HDMI cables.

Switching the Display Language to English
ホームメニューなどの言語を英語にする

- Using the Home menu screen, you can switch the on-screen display language to English.

  ホームメニューなどの画面表示を英語にすることができます。

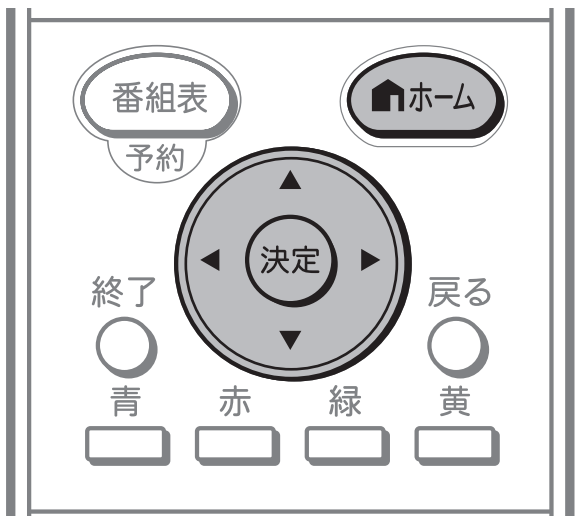

◇**おしらせ**◇

誤ってホームメニューを英語にしてしまったときは

- ホームメニューから「Setup」－「(View Setting)」－「言語 (Language)」を選んで決定し、「日本語」を選んで決定すると日本語になります。


1 Select “設定” (Setup) on the Home menu.
ホームメニューから「設定」を選ぶ

Press ホーム and select with ◀▶




2 Select “(視聴準備)” (View Setting).
「(視聴準備)」を選ぶ

Select with ▼ ◀▶

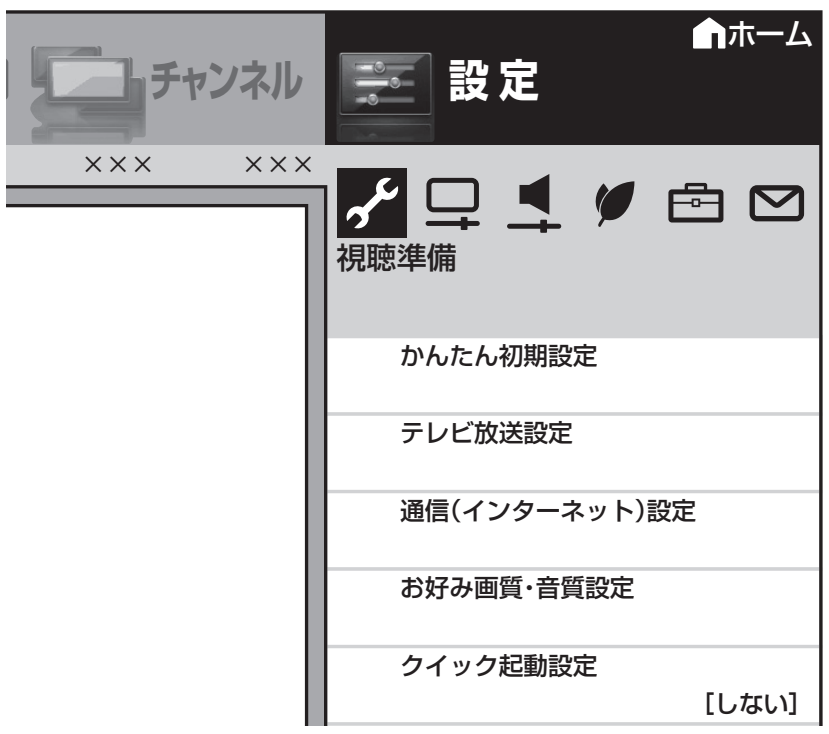

3 Select “Language(言語)”.
「Language(言語)」を選ぶ


Select with ▲▼ and press 決定

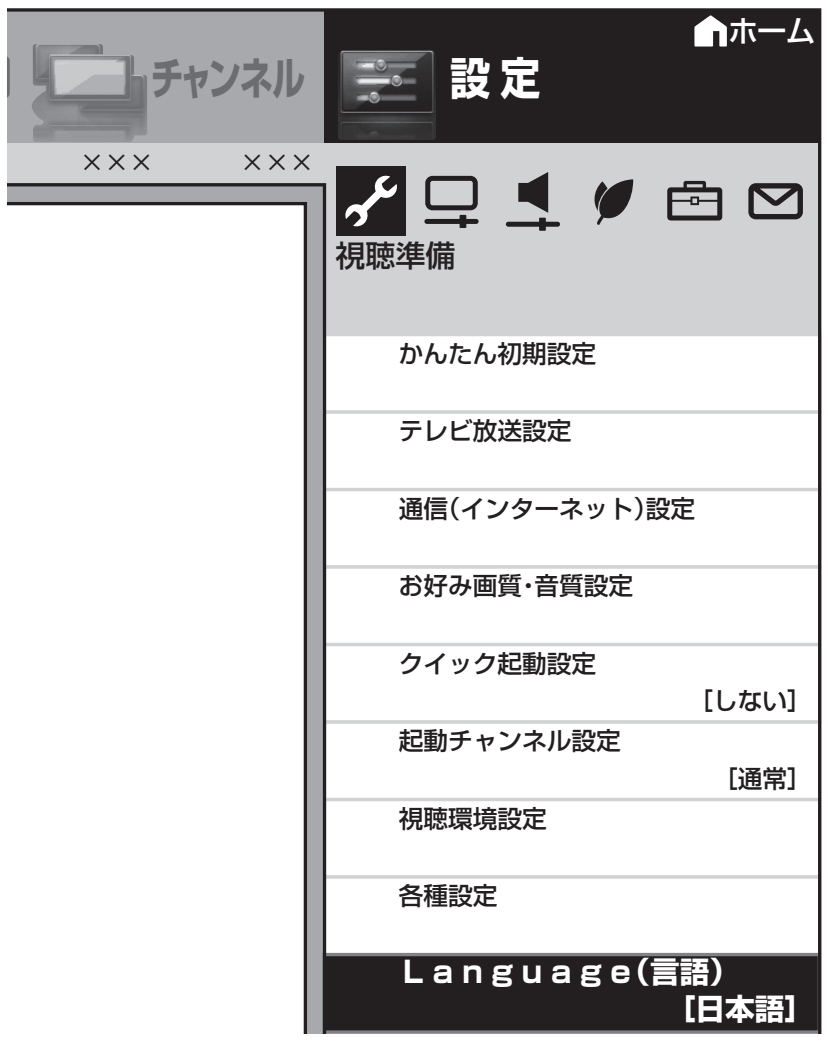

4 Select “English”.
「English」を選ぶ

Select with ▲▼ and press 決定

Enter.
決定する

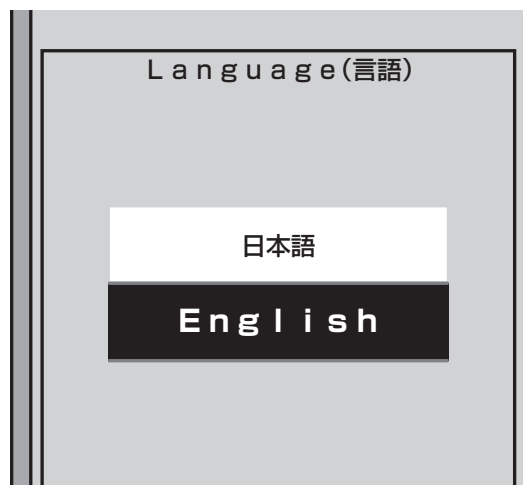

- The menu screen is now displayed in English.
- 画面表示が英語になります

5 Finish this operation.
終了する

Press ホーム